
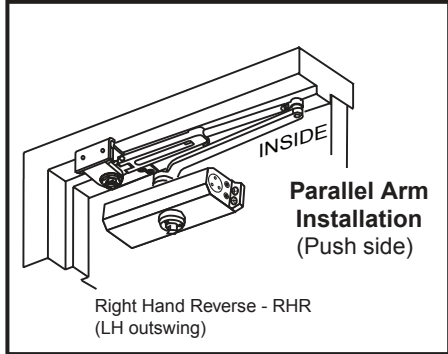
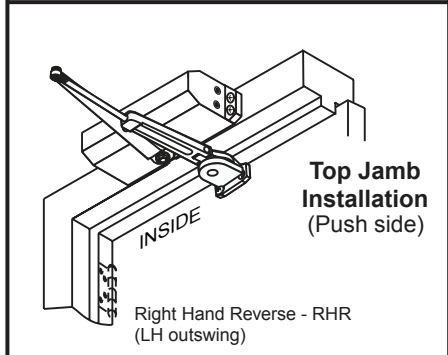


5400-ARMF

Installation Instructions

Adjustable Hold-Open Arm with Series 5400 Door Closer








Non Handed Door Closer

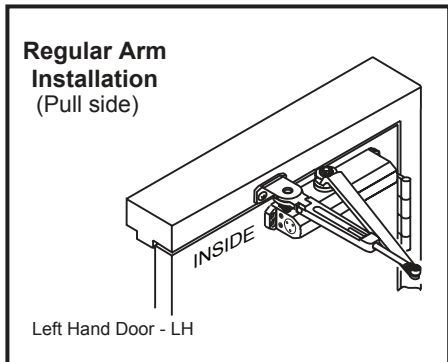




CAUTION
An incorrectly installed or improperly adjusted door closer can cause property damage or personal injury. These installation instructions should be followed to avoid the possibility of missapplication or misadjustment

NOTE: Refer to installation and adjustment instructions supplied with 5400 series door closer.

- Doors should be hung on ball bearing or anti-friction hinges.
- A separate door stop is recommended.
- Door and frame must be properly reinforced.
- Adjust closing time speed between 3 and 7 seconds.
- Door closers should NOT be installed on the exposed side (weather side) of exterior doors.

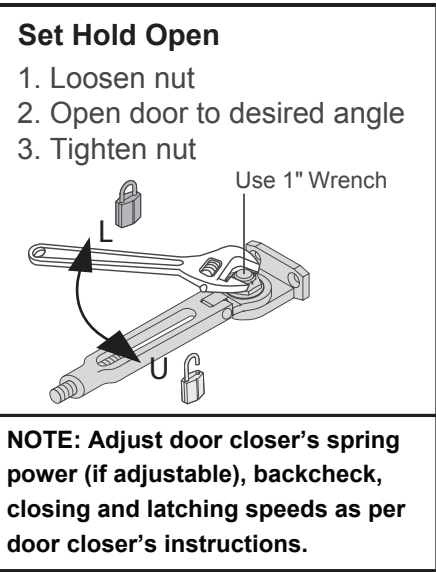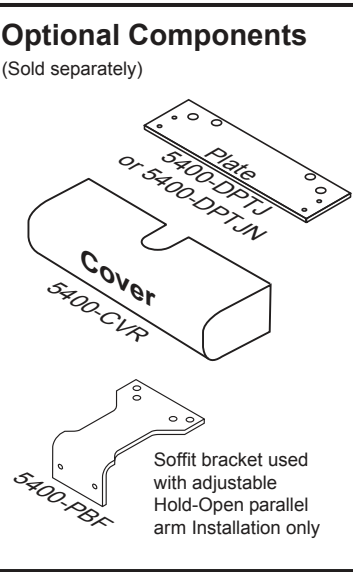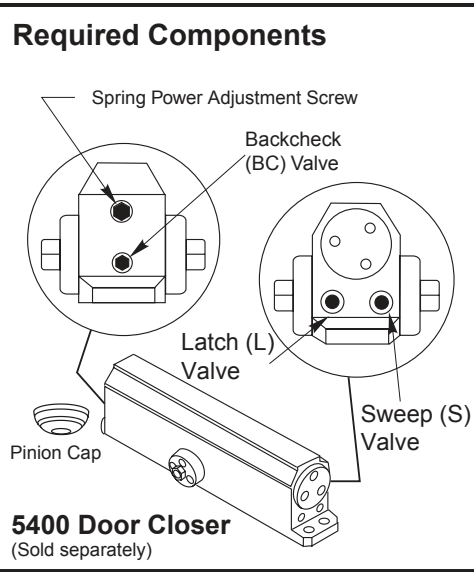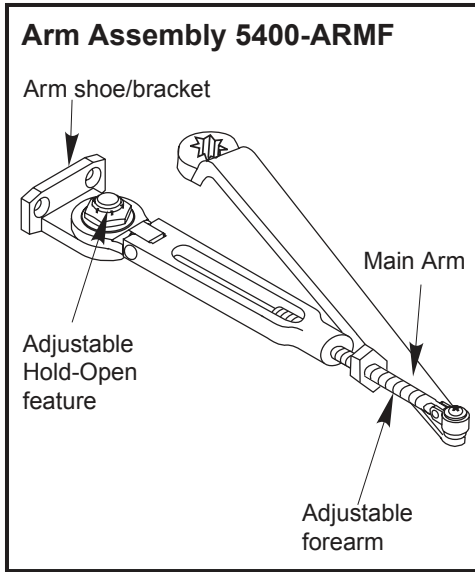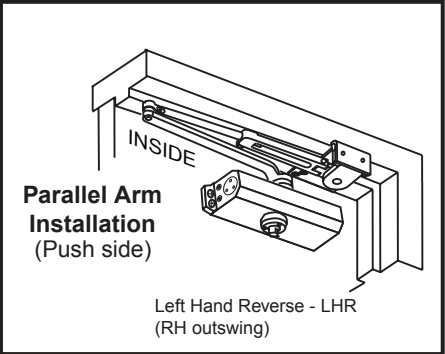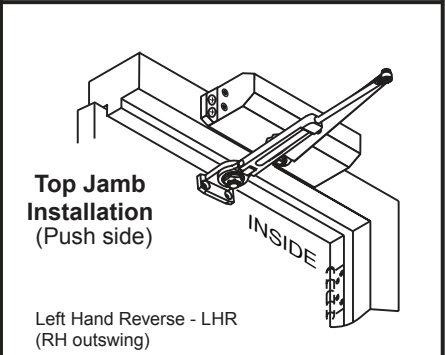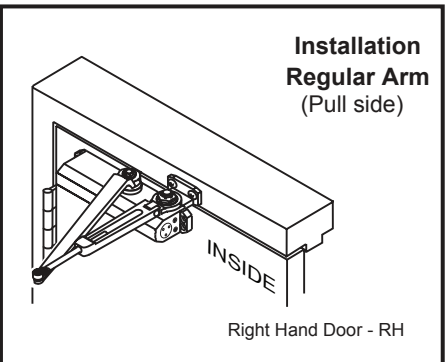



Hold-Open Arm Door Closer - Regular Mounting

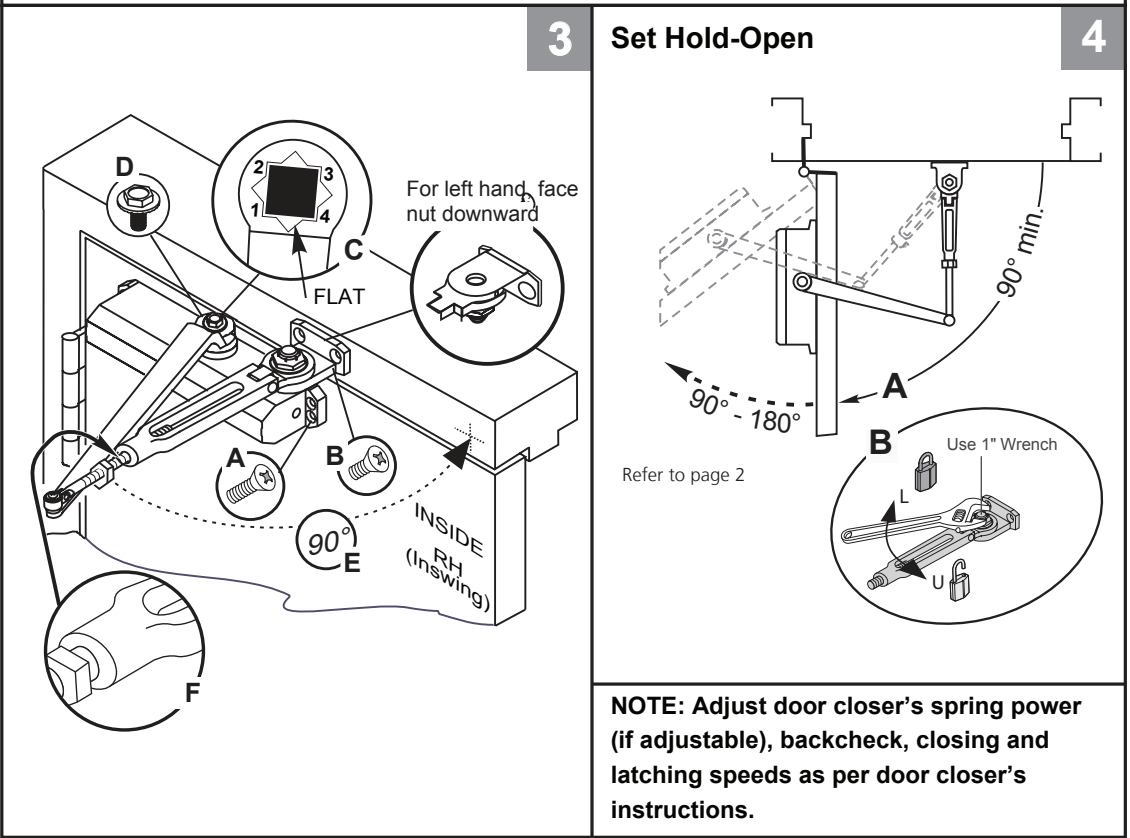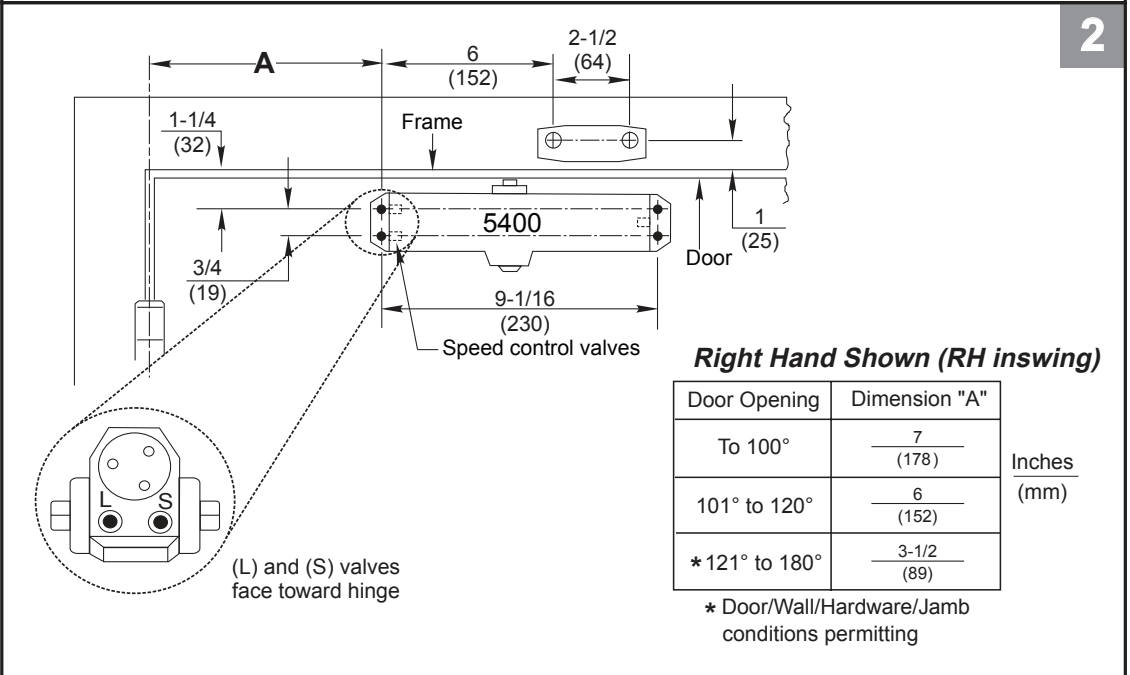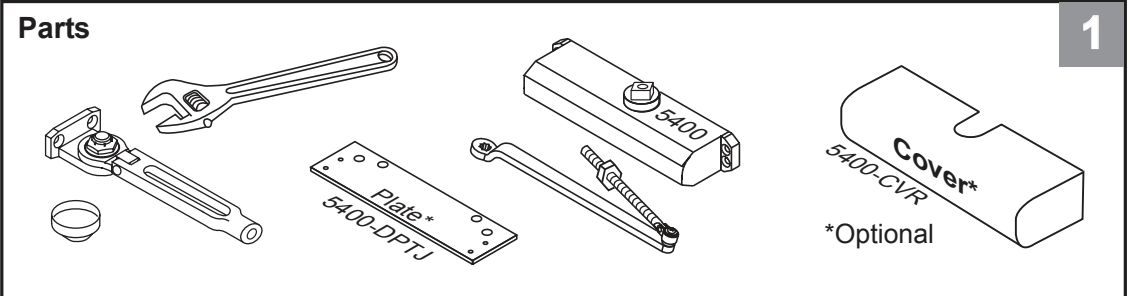

5400-ARMF

Hold-Open Arm Door Closer - Top Jamb Arm

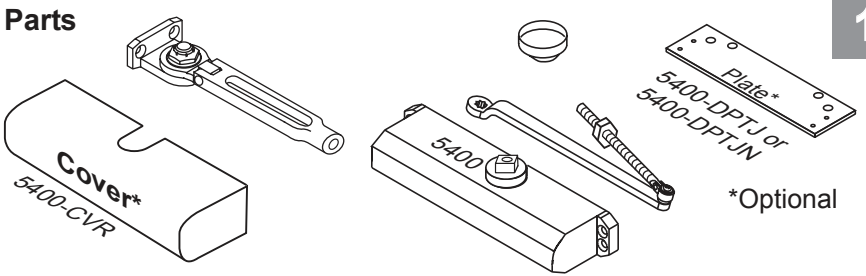Parts

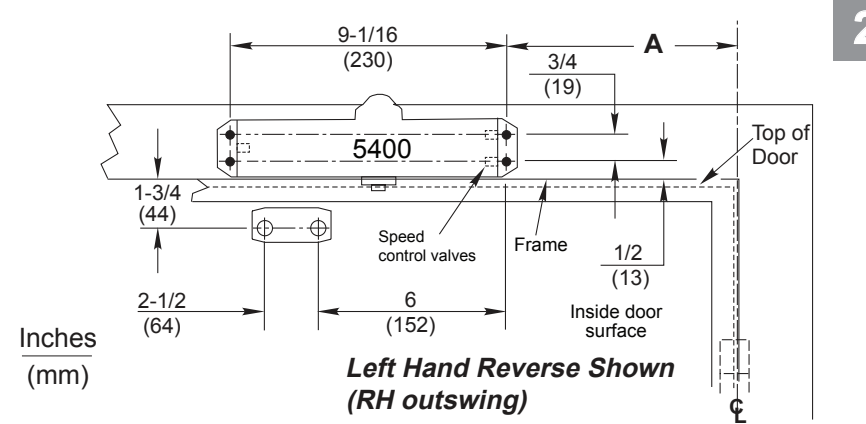

Left Hand Reverse Shown (RH outswing)


Door Opening	Dimension "A"
To 100°	7-1/2 (191)
101° to 120°	6 (152)
*121° to 180°	3-1/2 (89)


*Door/Wall Hardware/Jamb conditions permitting

Longer connecting rod required for reveals greater than 3" (76)

Installation Instructions


Hold-Open Arm Door Closer - Parallel Arm

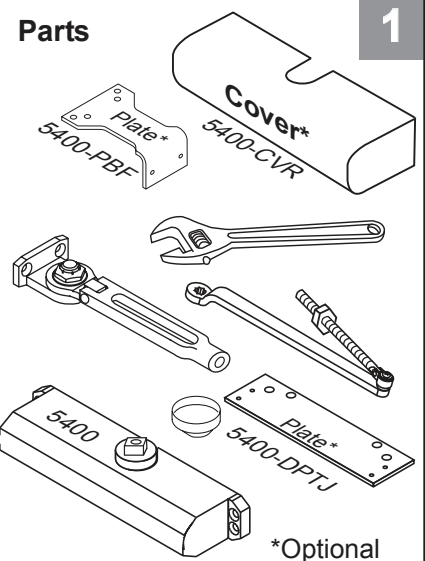Parts

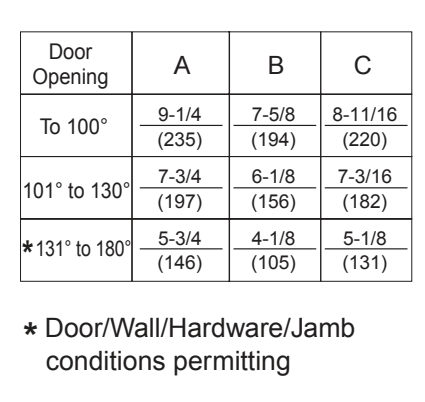



Door Opening	A	B	C
To 100°	9-1/4 (235)	7-5/8 (194)	8-11/16 (220)
101° to 130°	7-3/4 (197)	6-1/8 (156)	7-3/16 (182)
*131° to 180°	5-3/4 (146)	4-1/8 (105)	5-1/8 (131)

* Door/Wall/Hardware/Jamb conditions permitting

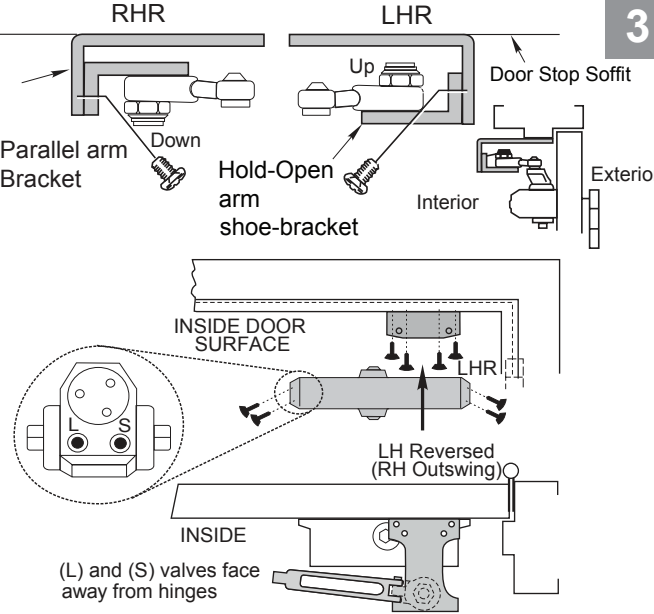


Main Arm

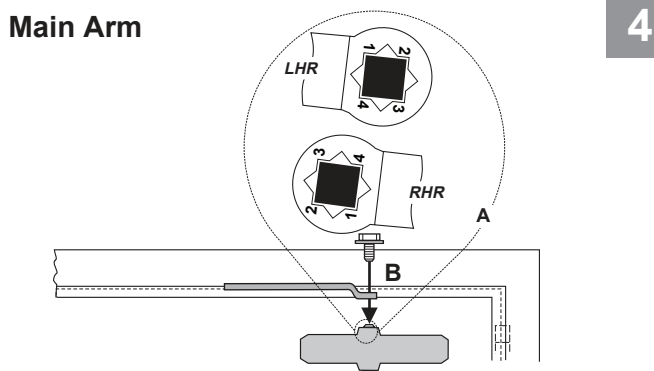


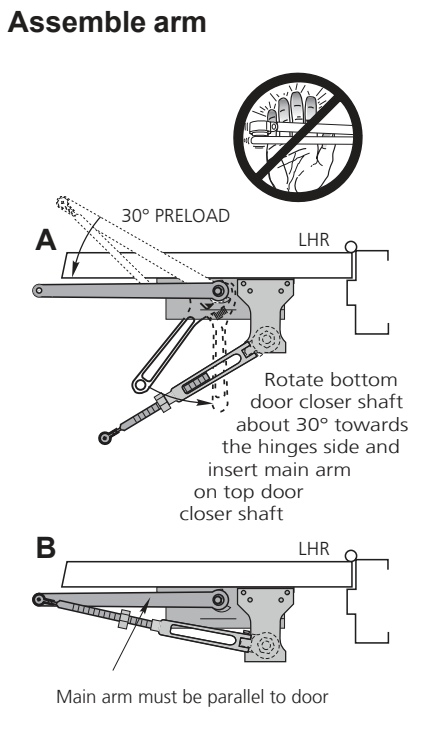


Assemble arm

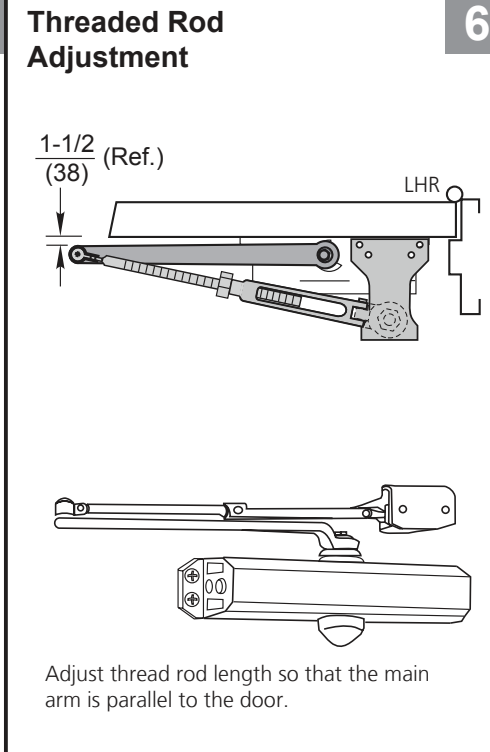

Threaded Rod Adjustment

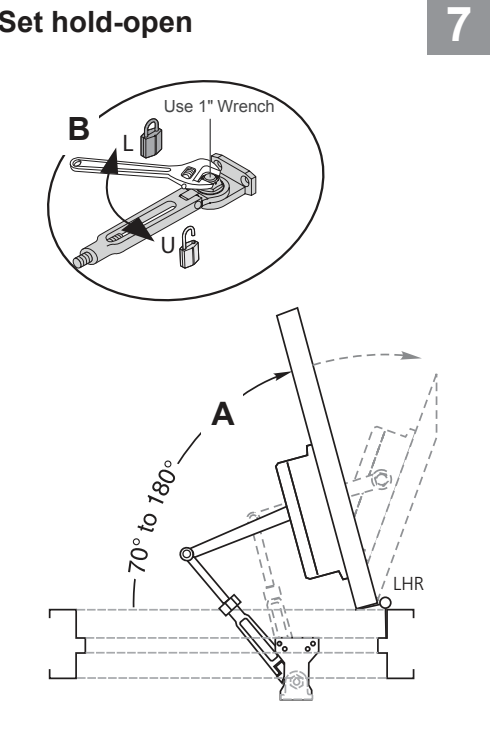

Set hold-open

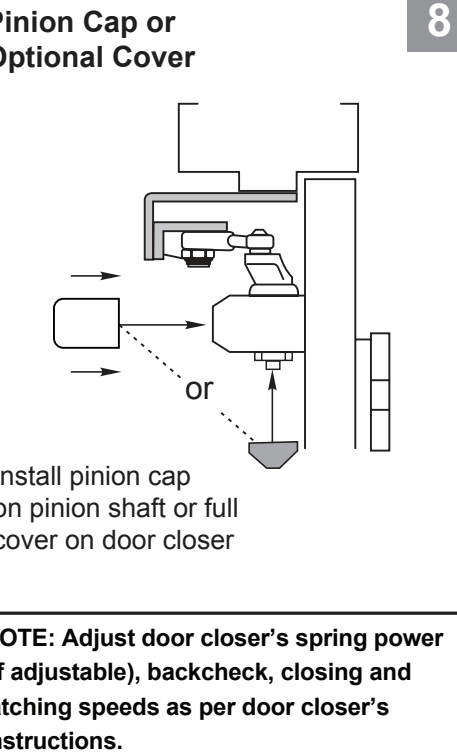

Pinion Cap or Optional Cover

NOTE: Adjust door closer's spring power (if adjustable), backcheck, closing and latching speeds as per door closer's instructions.

NOTE: Adjust door closer's spring power (if adjustable), backcheck, closing and latching speeds as per door closer's instructions.