AC or DC Power

Supply for Door

00

Strike

exceed:

Jumper JW8

NO TS8

28 VAC / 1 A max

30 VDC / 1 A max

(Output 1)

Unused pin

000000

000000

The maximum supply for the AC or DC

Power Supply for Door Strike must not

Alternative Wiring

Trigger for door operator

Jumper JW8 controls

whether the contact

is normally open or

normally closed.

for Dry Contact

| DOOR | DC 1000 | Wear Sure WE | C 1000 | C 100


DC Output

Door Strike or

Magnetic Lock

18 AWG



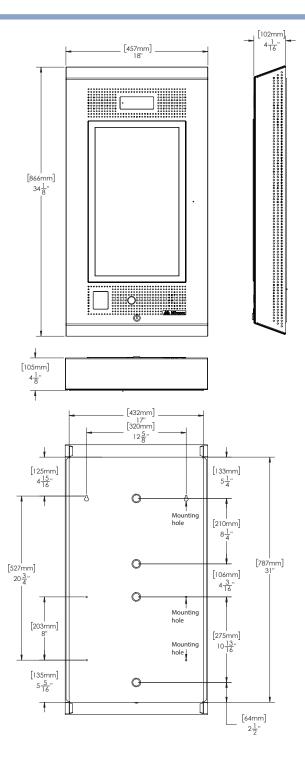

Mircom

http://www.mircom.com CANADA - Main Office 25 Interchange Way Vaughan, ON L4K 5W3 Tel: (888) 660-4655

(905) 660-4655

U.S.A 4575 Witmer Industrial Estates Niagara Falls, NY 14305 Tel: (888) 660-4655 **TECHNICAL SUPPORT** Tel: 1-888-647-2665

Mount the **Enclosure**

Attention: The 22" Touch Screen enclosure is heavy (80 lbs or 37 kg).

> Never attempt to lift this product by yourself. At least two people should lift it together.

The enclosure mounts on the wall. Mount the enclosure right-side up (the Mircom logo on the

door is in the lower right corner).

You need:

4 fasteners appropriate for the wall that you are mounting the enclosure on.

- 1. Find a suitable location for the enclosure. The wall must be able to support a weight of 80 lbs (37 kg).
- 2. Mark the back mounting locations of the two top screws. Ensure that at least one screw is over a wall stud.
- 3. Place the fasteners halfway into the wall in the two top keyhole locations and wall stud.
- Place the enclosure onto the fasteners, then lower it so that the fasteners fit in the narrow part of the keyholes.
- 5. Screw the other fasteners into the remaining holes.
- 6. Tighten all fasteners into place.

Installation Prerequisites

- Verify that the building telephone infrastructure is operational. When wiring an NSL installation it may be necessary to check each resident's line.
- Ensure there is a provision for a ground circuit. The Telephone Access System assembly must be grounded by a qualified electrician. An improperly grounded unit can result in equipment malfunction and void the warranty.
- Use the latest Telephone Access System controller firmware. Mircom periodically updates panel firmware and Configurator Software to add features and correct any minor inconsistencies. For information about the latest firmware or software visit the 'Manuals and Downloads' section of the Mircom website at www.mircom.com

AC Door Strike or Maglock 3 DC Door Strike
18 AWG
(Output 1) AC or DC Door **Auxiliary Door** Strikes: Strike: see 4 see 2 and 3 AC Door Strike or 000000 00 000**5**0 Magnetic Lock 00 00000 000000 AC Power Supply Jumper JW8 for Door Strike 73 BB 79 BB 1 10 BB 1 LDBCB BB 170 BB 1 TO BB 1 CONT. | Cont. of Cont For a door strike: connect the Jumper JW8 iumper wire to the top pin of jumper JW8 (normally open). AC DOOR DIP Switches: For a maglock: connect the see 5 SUMBO PHONE MOD-ON BOME **....** jumper wire to the bottom pin of jumper JW8 (normally JTAS PORT L DEBUG PORT closed). SHANDON OTOWN ... **Auxiliary Door** (Output 2) ::::: 18 AWG Power switch Door Strike Note: Most door strikes are non-ØØØØØØ polarity. nt none Way Sure W 0000 00000 000 000 Power Supply Warning: Turn the power Note: If AC power off before wiring. supply is used, polarity does not Install all power supplies outside the enclosure. apply.

Wiring Requirements

Unless specified otherwise, all wiring is a maximum length of 1000 ft (304.8 m).


RS-485: Maximum total length: 4000 ft (1219.2 m) Use twisted shielded pair.

Door Strike: The door strike power supply depends on the door strike power requirements.

Maximum Power Supply Wire Distances

Gauge	Distance
16	125 ft (38.1 m)
14	200 ft (60.96 m)
12	320 ft (97.536 m)
10	500 ft (152.4 m)

 
Outputs 2-4



Contact ratings for outputs 2-4: 125 VAC / 2 A 30 VDC / 1 A

DIP Switch Settings for RS-485 Address

 AC DOOR




Each Touch Screen must have a unique RS-485 address.

Use DIP switches 1-6 to set the RS-485 network address. See LT-969 for details. Leave DIP switch 7 on.

> © Mircom 2021 Printed in Canada Subject to change without prior notice LT-6204 rev 5


For more details, see LT-996 and LT-969 on the Mircom website and the USB flash. Mircom technical support: 1-888-647-2665



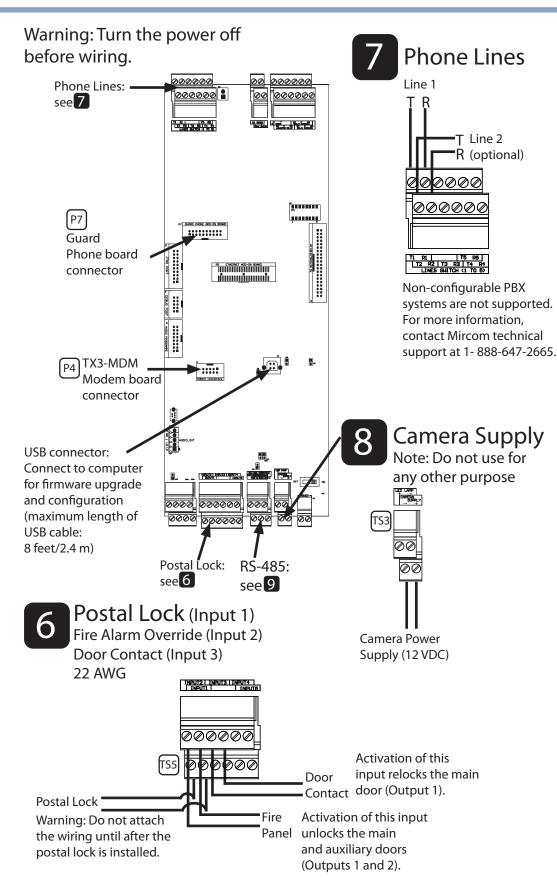


9 RS-485


Maximum total length: 4000 ft (1219.2 m) for 22 AWG Use twisted shielded pair. See LT-996 for complete details.

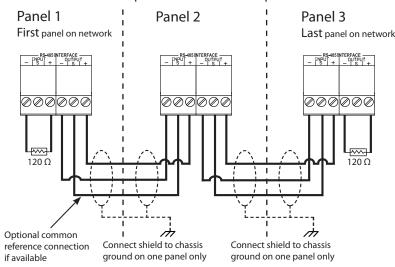


10 Ground and Power

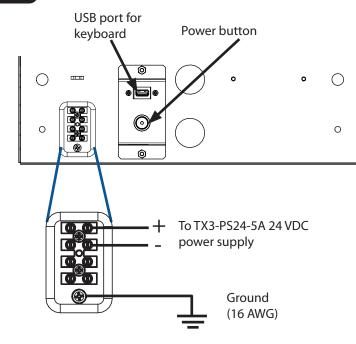

Mount the TX3-PS24-5A 24 VDC, 156 W Power Supply

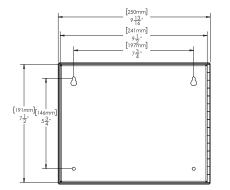

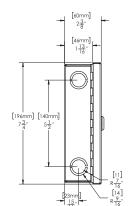


To surface mount the power supply enclosure: You need 4 fasteners appropriate for the wall that you are mounting the enclosure on.

- 1. Find a suitable location for the power supply enclosure, such as over a wall stud.
- 2. Using the enclosure as a template, mark the two top mounting hole locations. Ensure that at least one side is over a wall stud.
- 3. Remove the enclosure and place two wall fasteners halfway into the marked hole locations.
- 4. Place the enclosure onto the fasteners and lower it so that the fasteners fit in the narrow part of the keyholes.
- 5. Screw the other two fasteners into the two remaining holes.
- 6. Tighten all four fasteners into place.

Note: The enclosure can also be mounted directly onto the drywall using anchors.

12 Connect the Power

- Set the voltage selectable switch on the power supply to the appropriate voltage. The voltage selectable switch can be set to either 115 V or 230 V.
- 2. Connect the load power supply wires to the Touch Screen terminal screws as shown in step 10.
- 3. Connect the other end of the load power supply wires the **Load** terminals.
- 4. Connect the building power supply wires to the **Line** terminals as shown below.
- 5. Turn the power on by pressing the power button.

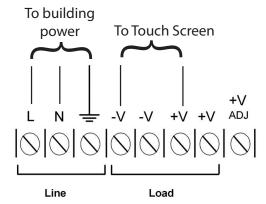

13 Connect the UPS

Follow the manufacturer's instructions included with TX3-TOUCH-UPS-KIT.

See the Mircom document LT-6714, included with TX3-TOUCH-UPS-KIT, for instructions on:

- Connecting the USB cable to the TX3 Touch.
- Installing the APC PowerChute Personal Edition Software (only on existing TX3 Touch installations).
- Connecting the power cable from the TX3-PS24-5A power supply to the uninterruptible power supply.

WARNING

To ensure the security of occupants, change the level 3 passcode from its default setting.
See LT-995 on mircom.com for details.