


DL2500


HEAVY DUTY DEADLATCH LOCK

Installation Instructions

A Dimensions

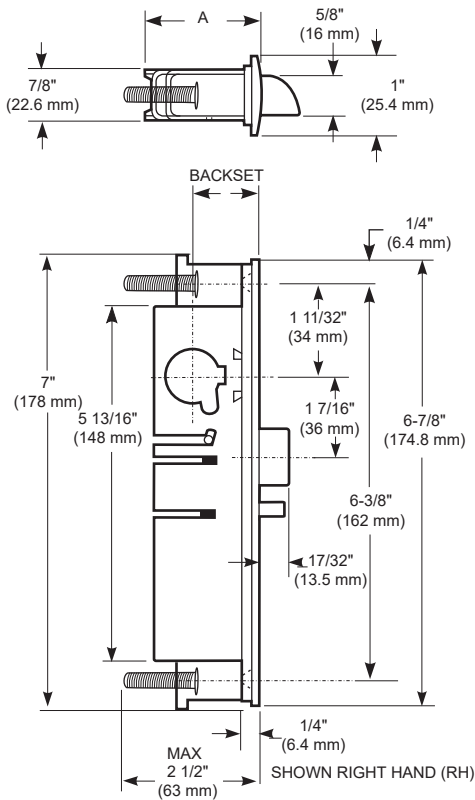


How Backset is measured

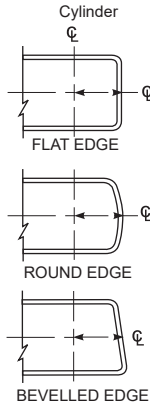

BACKSET	DIMENSION A
31/32" (24.6 mm)	1.60" (40.6 mm)
1 1/8" (28.6 mm)	1.75" (44.5 mm)

CYLINDER WITH CAM A

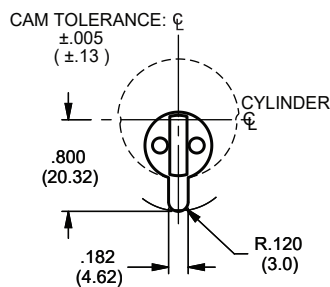

Faceplate

1 X 6-7/8"
25.4 X 174.6 mm

FP31 - FLAT

FP32 - RADIUS

FP33 - LH BEVEL


FP34 - RH BEVEL

RADIUS W/ WEATHERSTRIP

FP35 - LH
FP36 - RH


! Lock accepts standard 1-5/32" (29.4 mm) diameter cylinders with Cam A (Adams Rite) Cylinder length depends on door thickness and cylinder collar height.

1 Door Stile & Frame Preparation

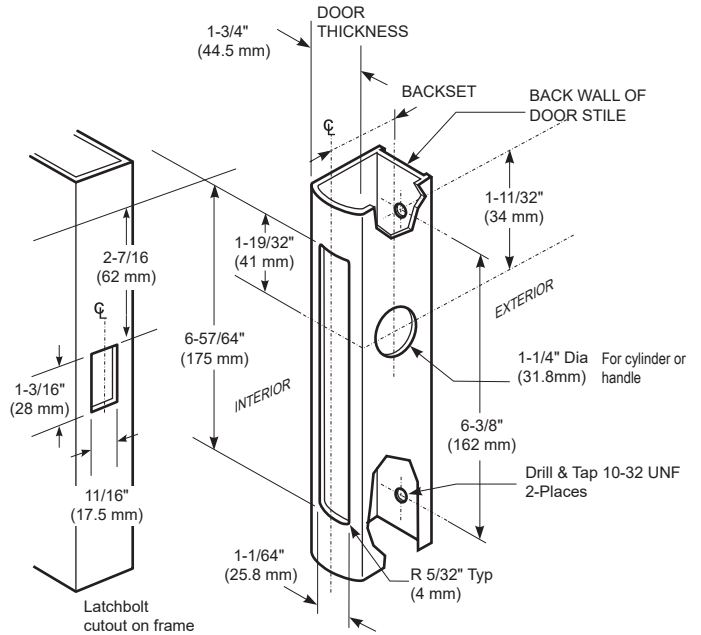

NOTE: Indicated door preparation is for a standard aluminum door thickness of 1-3/4" (44.5 mm). Other door thicknesses, doors with thermal cladding or doors with a bevelled edge will require special door preparation.

2 Lock Installation

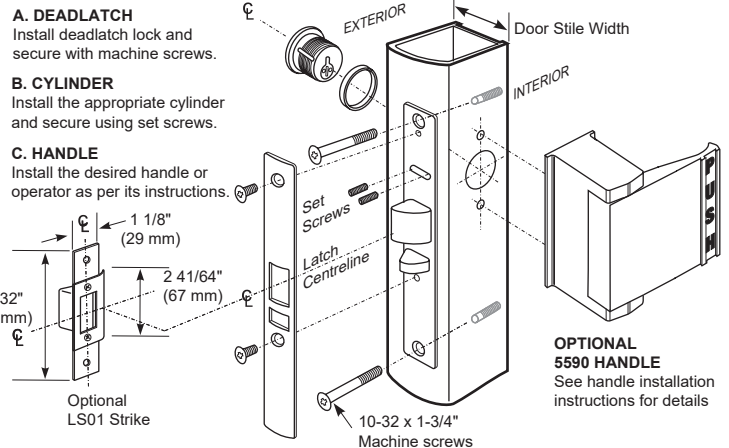

NOTE: Depending on door stile width, longer or other type mounting screws may be required. Longer mounting screws to be determined and supplied by installer. Other mounting methods can be determined and applied by door manufacturer or installer (Detail deadlatch dimensions are available on request).


! TO CHANGE DEADLATCH HANDING
Remove latch spring support bracket, then remove, rotate and re-install latch and support bracket. Adjust spacer tube as required to attach to lock on backwall of door stile.

B Related Hardware & Accessories


SOLD SEPARATELY



5590SPK Extension Kit
For doors thicker than 2" (51 mm) including thermal cladding.

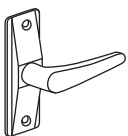

0112
Lever handle with 0112PLUG

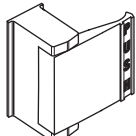


5590
Push/pull handle with 0112PLUG



Cylinder Collars




0112PLUG
Cam plug



LS01
Optional strike

C Latch Dogging

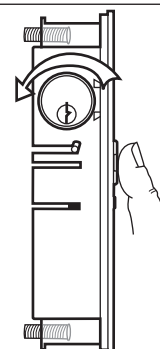


While bolt is fully retracted turn the key in the direction opposite to the door edge to retain the latch retracted, allowing the door to be unlatched.


DL2500

SERRURE À PÊNE DE SÛRETÉ ROBUSTE

A Dimensions

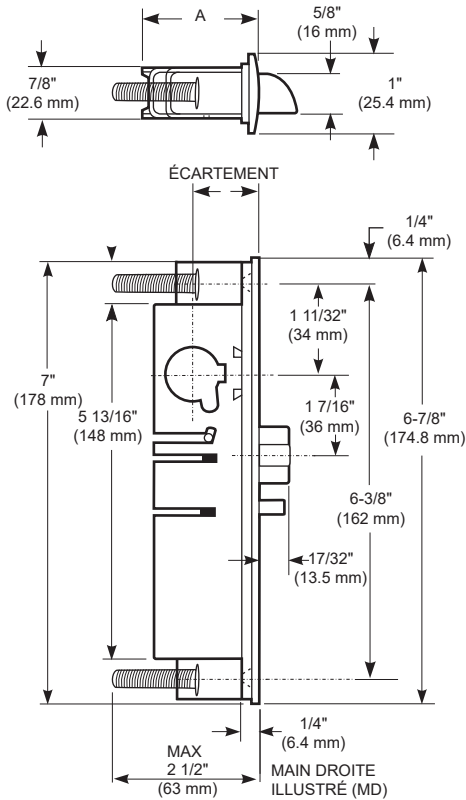


Comment mesurer l'écartement

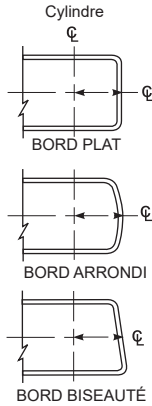


ÉCART	DIMENSION A
31/32" (24.6 mm)	1.60" (40.6 mm)
1 1/8" (28.6 mm)	1.75" (44.5 mm)

CYLINDRE AVEC CAME A

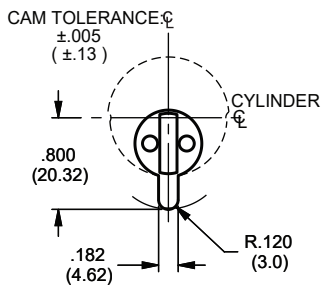


Serrure accepte les cylindres standard de 1-5/32" (29.4 mm) diamètre avec Came A (Adams Rite)

Têtières

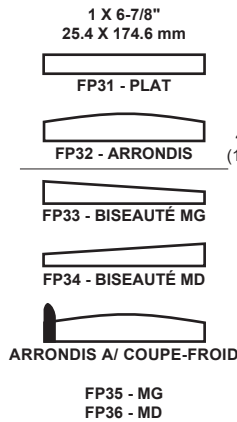


1 Préparation du montant et cadre de porte

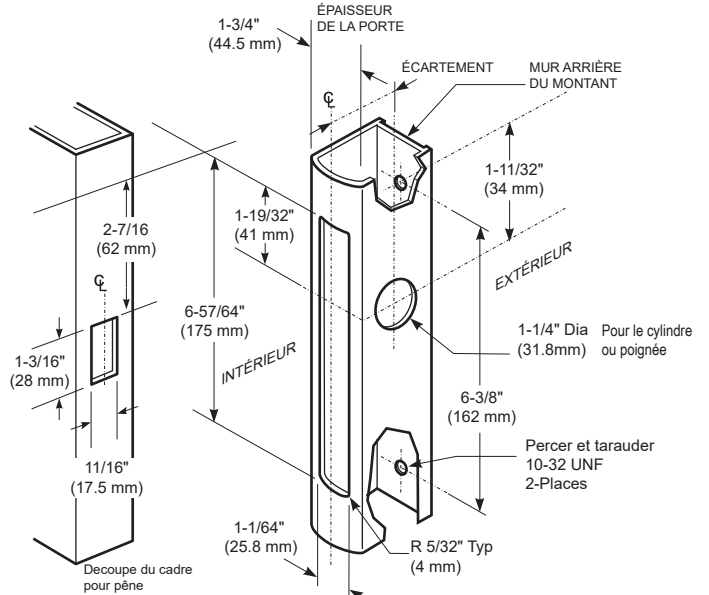

NOTE: La préparation de porte indiquée est pour une épaisseur de porte de 1-3/4" (44,5 mm). D'autres épaisseurs de porte, des portes avec revêtement thermique ou des portes avec un bord biseauté nécessiteront une préparation spéciale.

2 Installation de la serrure

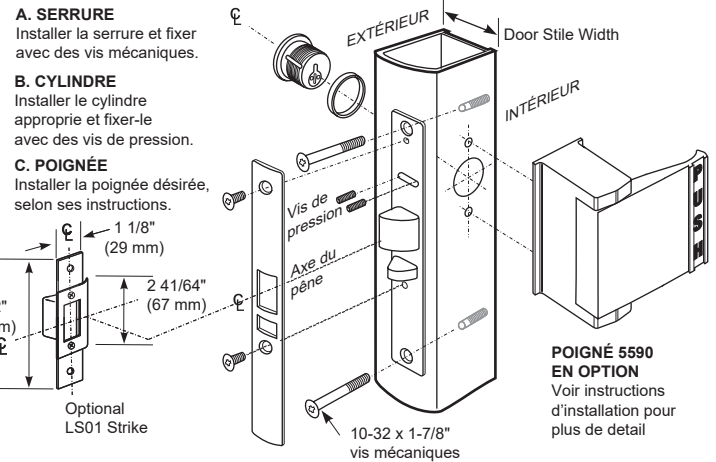

NOTE: Selon la largeur du montant de porte, des vis de montage plus longues ou des vis d'autres types peuvent être nécessaires. Les vis de fixation doivent être déterminées et fournies par l'installateur. Un tube d'écartement (non fourni) peut être utilisé pour fixer le pêne dormant au mur arrière du montant de porte, comme illustré. D'autres méthodes de montage peuvent être déterminées et appliquées par le fabricant ou l'installateur de la porte (les dimensions détaillées du pêne dormant sont disponibles sur demande).


POUR CHANGER LA MAIN DE LA SERRURE
Enlever le support du pêne à ressort, puis enlever et tourner le verrou et réinstaller les pièces.

B Accessoires connexes


VENDU SÉPARÉMENT



5590SPK Ensemble d'extension
Pour les portes d'une épaisseur de plus de 2" (51 mm) incluant le revêtement thermique.

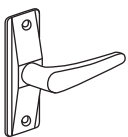

0112
Poignée à levier avec 0112PLUG

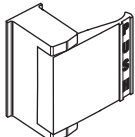


5590
Poignée à palette avec 0112PLUG



Colliers de cylindre




0112PLUG
Ensemble de came



LS01
Gâche optionnelle

C Retenue du pêne

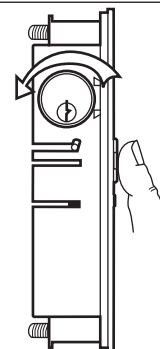

Pendant que le verrou est complètement enfoncé, tourner la clé dans la direction opposée du bord de la porte. Le verrou devrait rester rétracté permettant la porte d'être déverrouillée.