


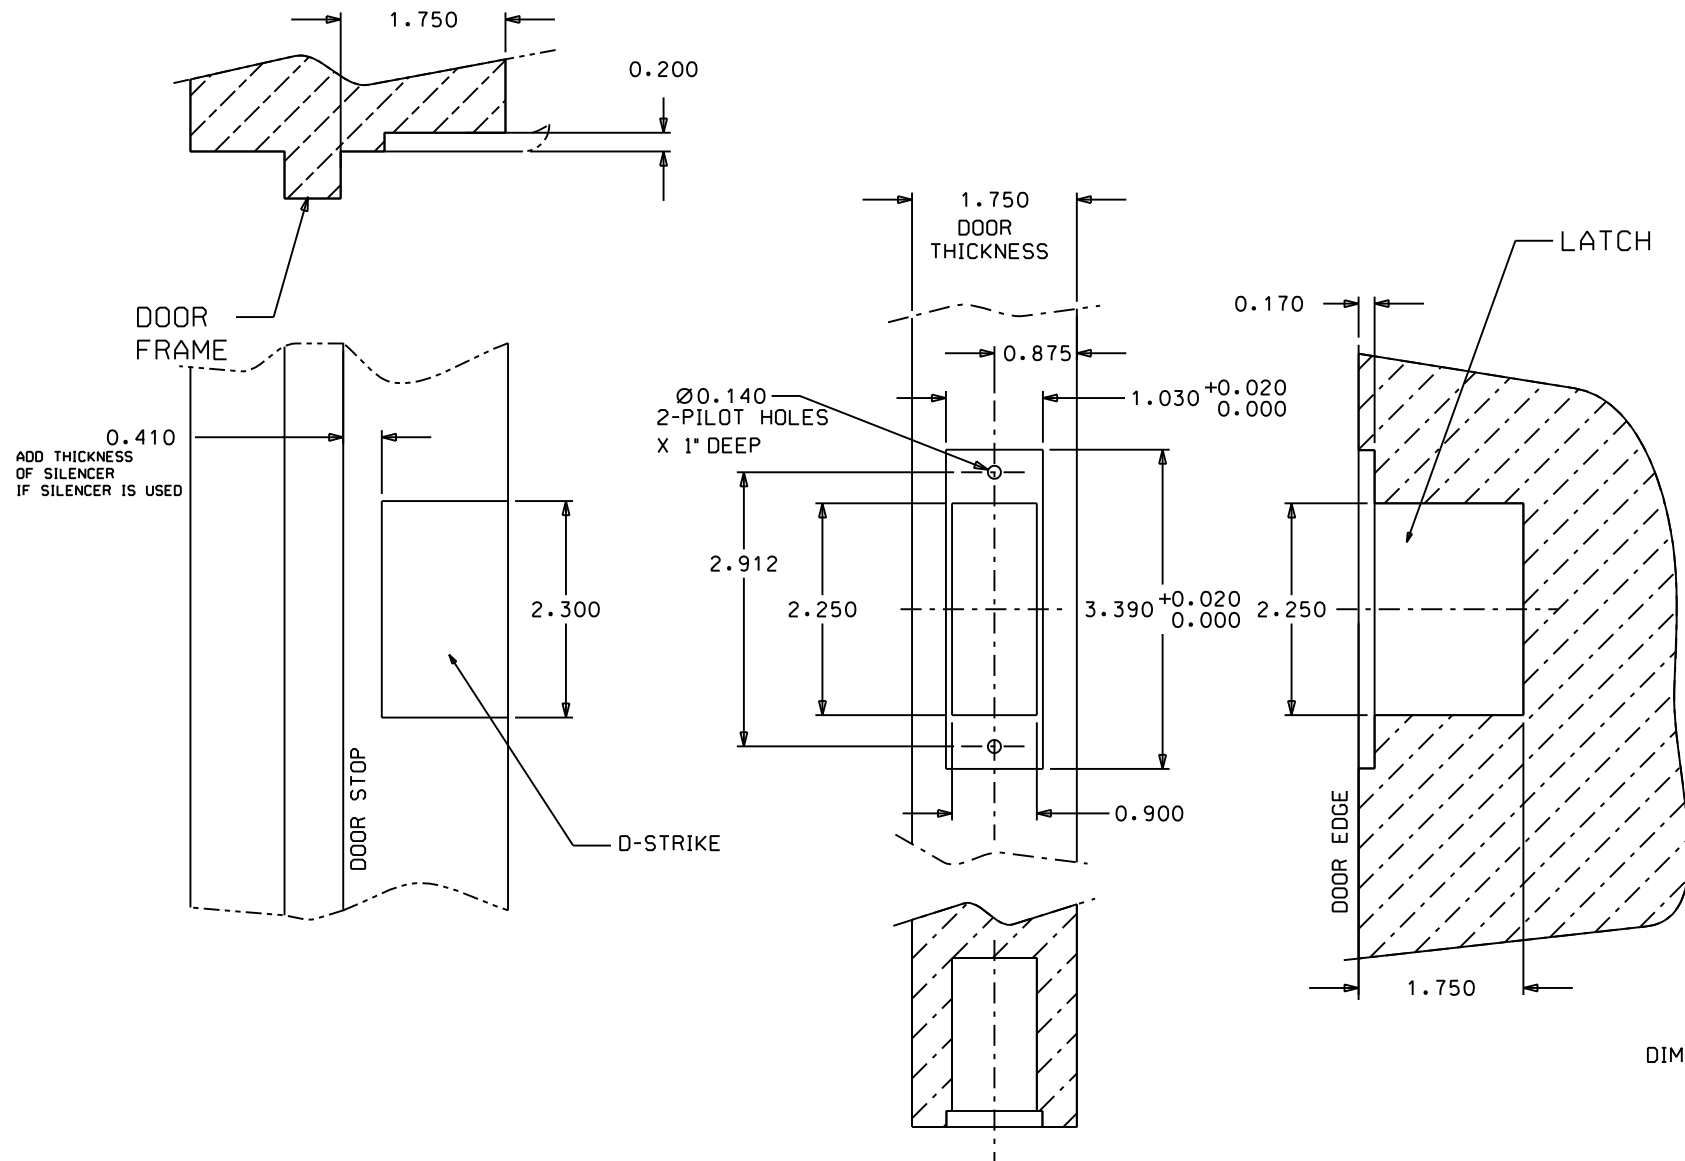


DO NOT SCALE DIMENSIONS ON DRAWING

CAUTION NOTE:
OBTAIN A SAMPLE OF THE ROLLER LATCH AND SELECTED
STRIKE. ENSURE THAT THE DOOR PREPARATION DIMENSIONS
MATCH WITH ROLLER LATCH AND STRIKE


TOLERANCES			CANAROPA			
$\varnothing.XX$	$\varnothing.XXX$	DEGREES	DRAWN CC	DATE	TITLE	
± 0.03	± 0.015	± 0.5		7-MAR-13		
MATERIAL			APPR'D	DATE	HEAVY DUTY ROLLER LATCH $\varnothing 1015D$ DOOR PREPARATION	
				7-MAR-13		
FINISH			APPR'D	DATE	SCALE 1:1	DWG NO
				27-JAN-16	REV A	CAN-RL-01015D

01015 ROLLER STRIKE

ROLLER LATCH

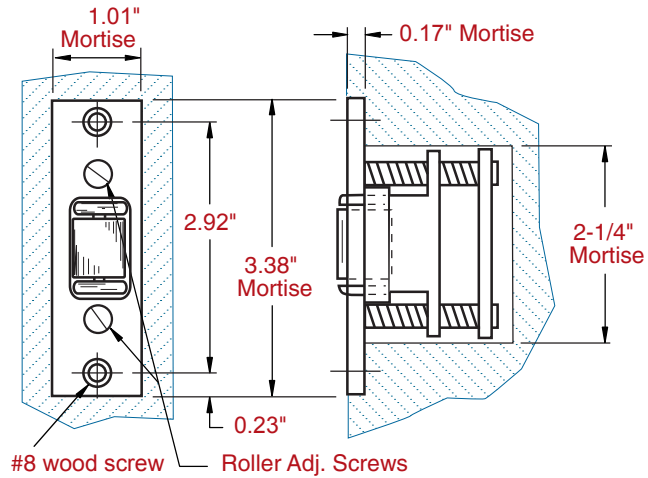


SECTION THRU DOOR

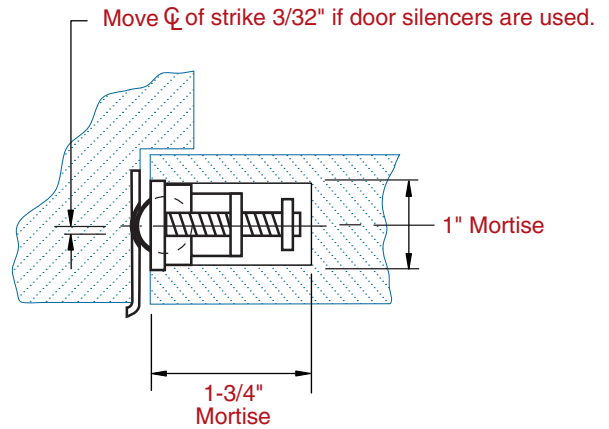


NOTE: Mortise dim's used only on wood doors.


ASA-STRIKE

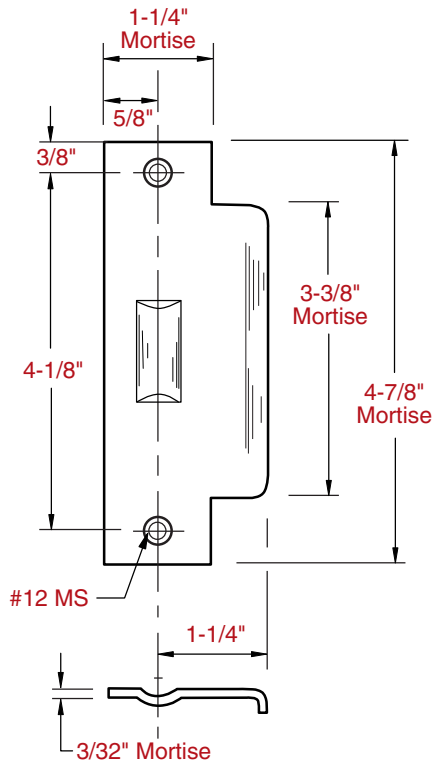

T-STRIKE

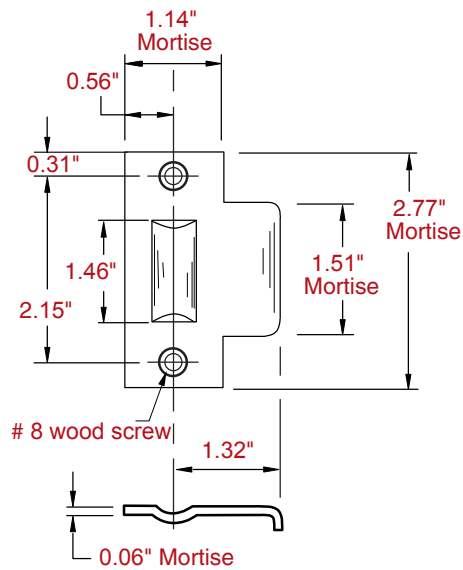

D-STRIKE

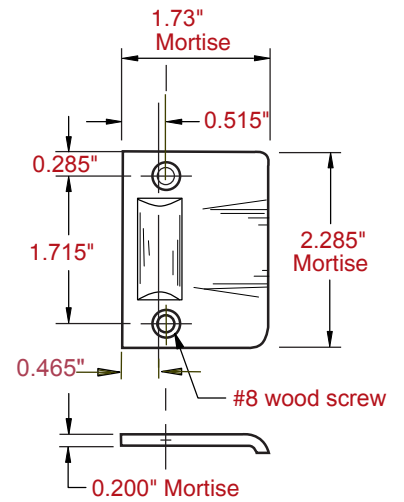

Not To Scale