


DIGITAL DOOR LOCK


FOR BACK SET 60M/M (2-3/8")

TEMPLATE FOR 2210
WITH 25.4mm (1") THROW

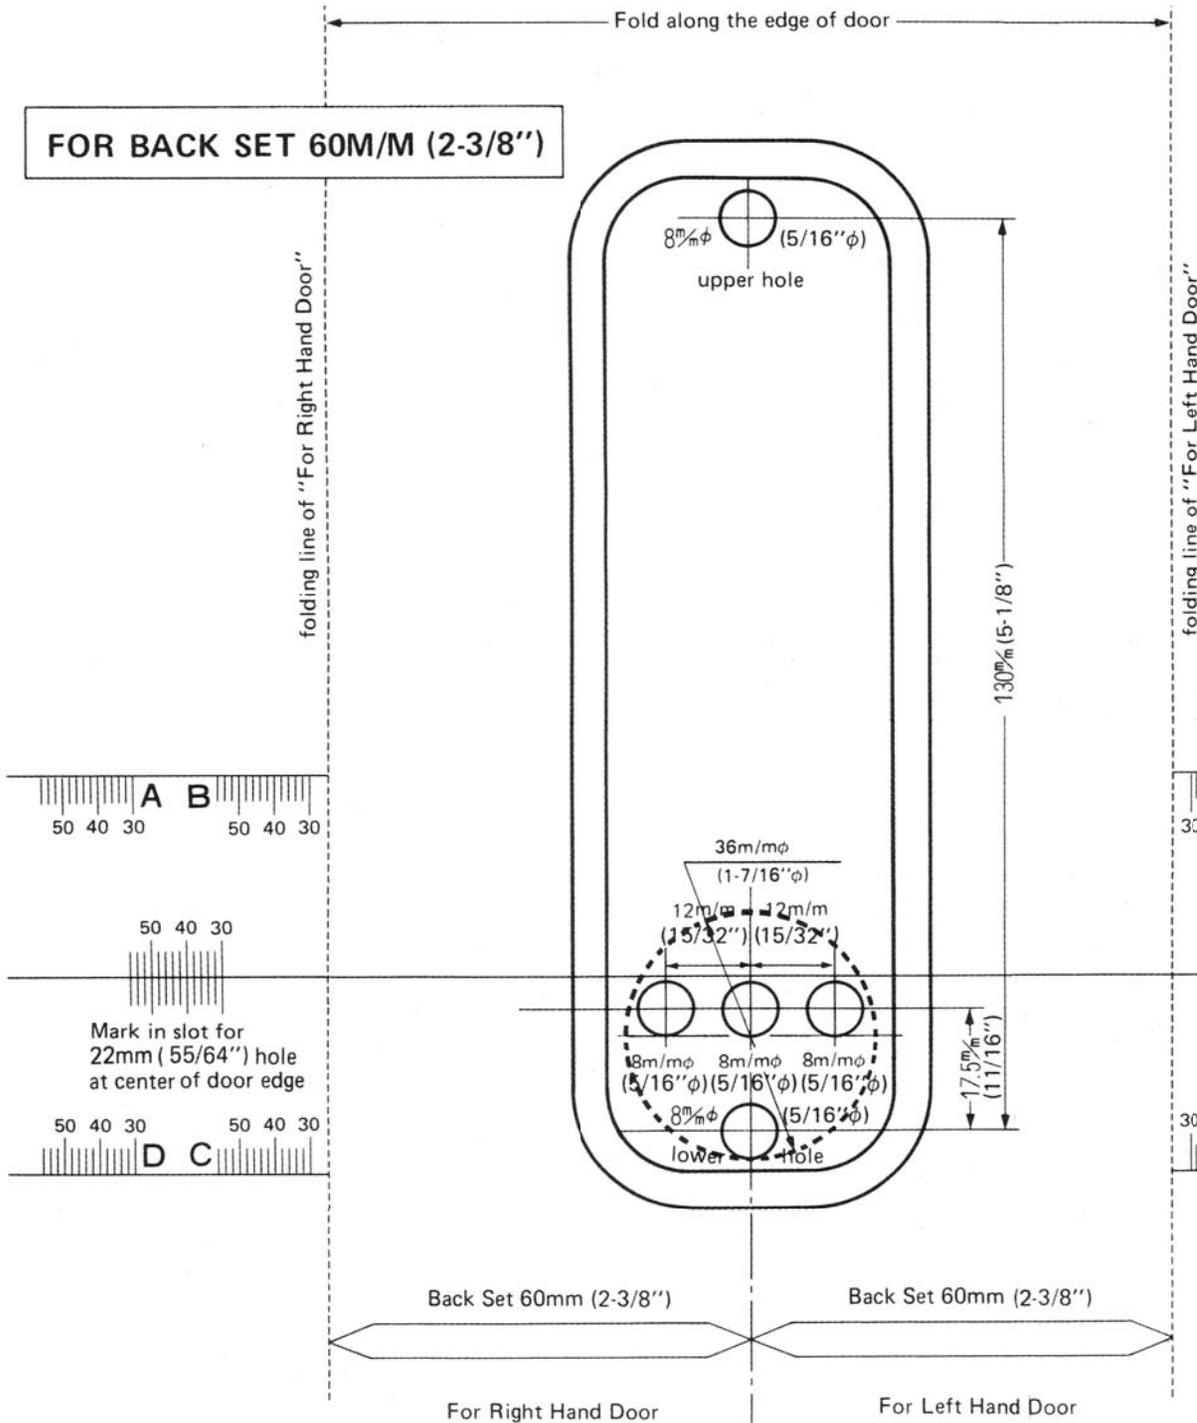

IMPORTANT

1. You must ensure that inside of 22mm (55/64") mortise hole is enlarged by moving wood drill up and down or using a small chisel – This is to give clearance for movement of 'CAM' which moves up as deadbolt is thrown (as shown in diagram below *) – check clearance required by turning spindle in deadbolt and view movement of cam.

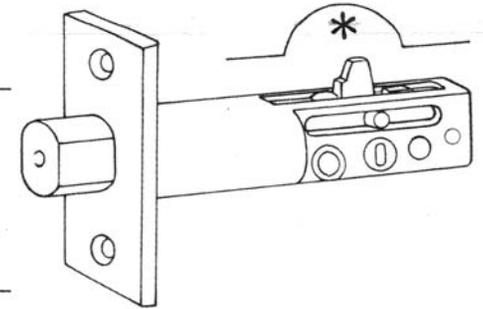


2. Ensure you drill hole in door frame deep enough to accept the 25.4mm (1") throw.

Document provided as-is, manufacturer reserves the right to make technical changes without prior notice.

Document fourni tel quel, le fabricant se réserve le droit d'apporter des modifications techniques sans préavis.

Do not use template if not to scale. Verify dimensions before use.
N'utilisez pas ce gabarit s'il n'est pas à l'échelle. Vérifier les dimensions avant utilisation.

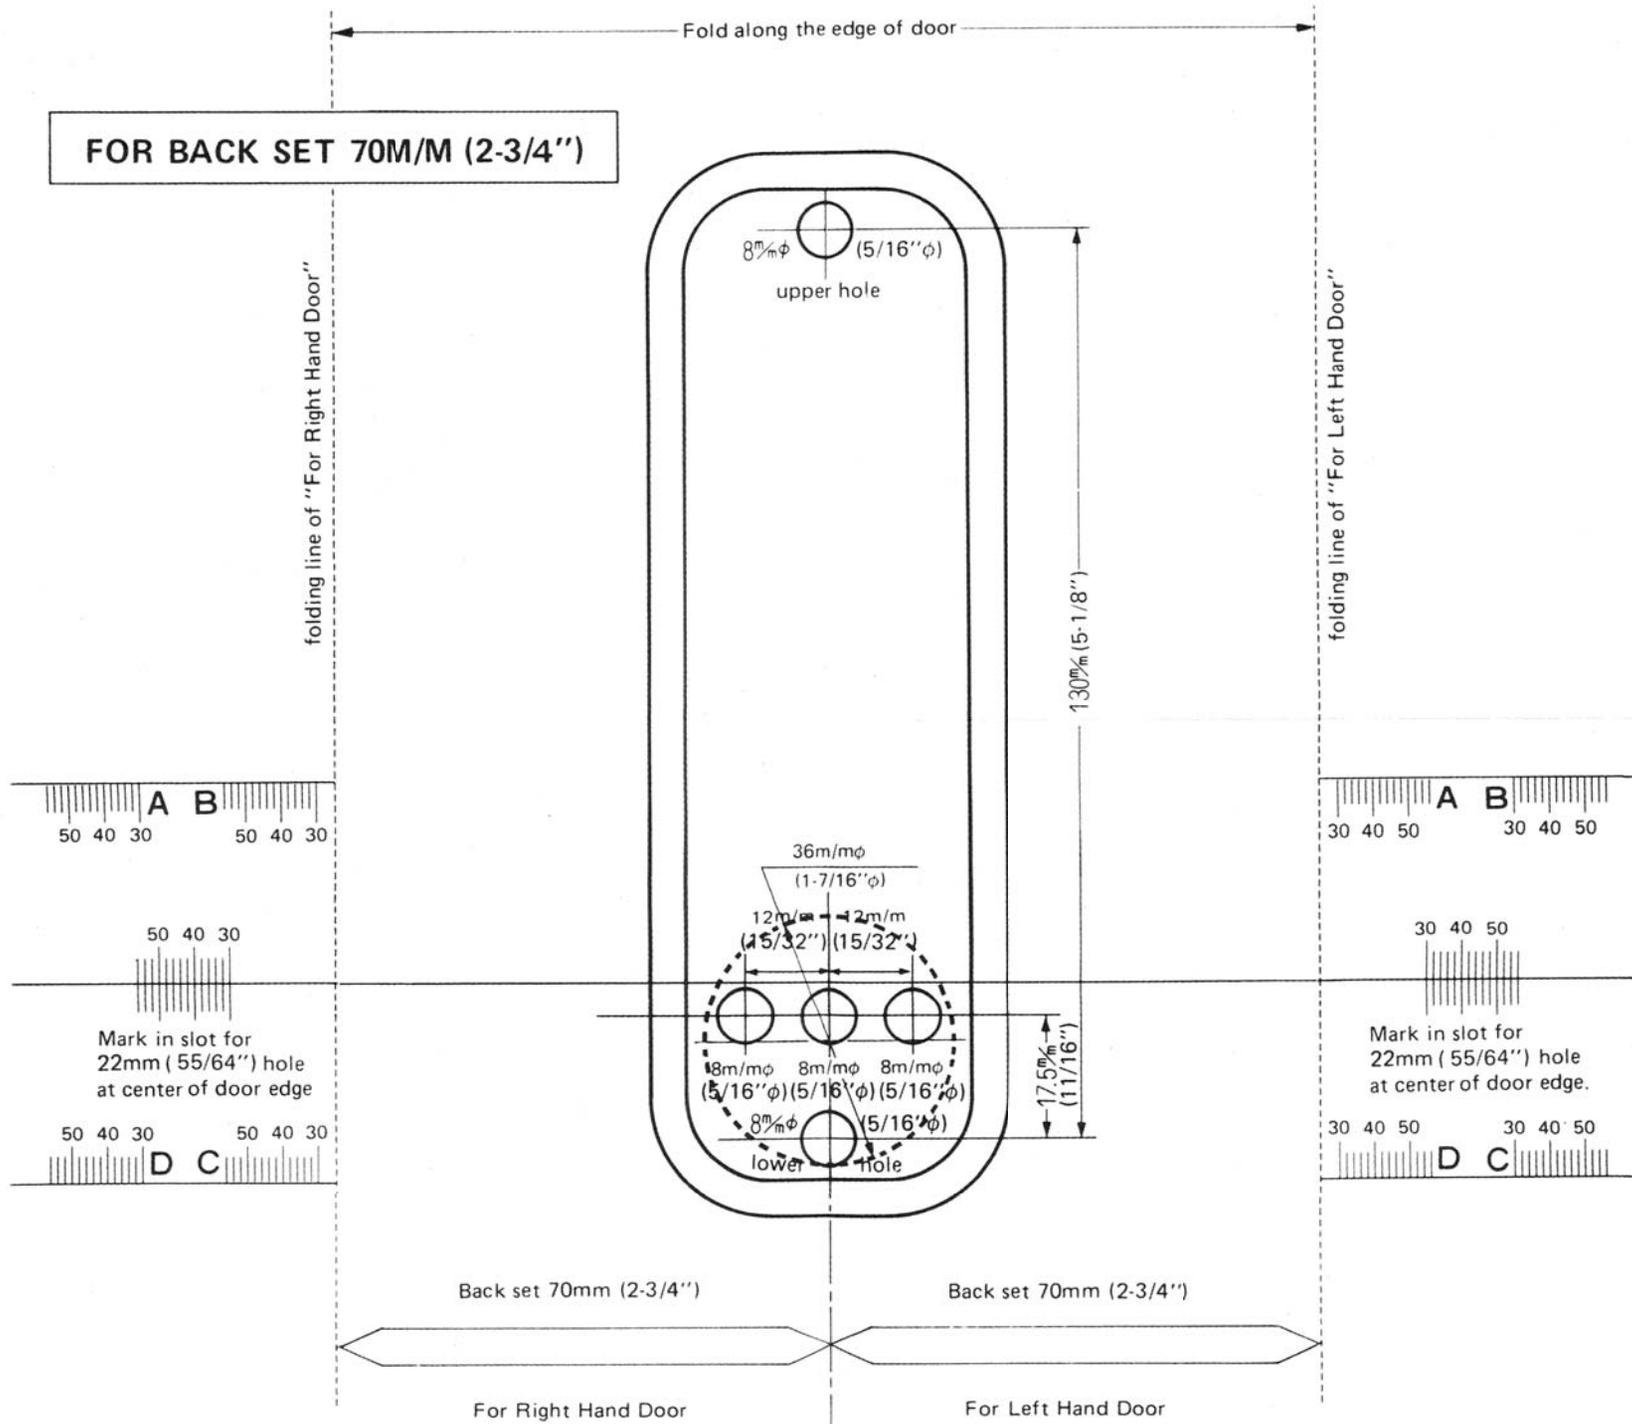

Do not use template if not to scale
N'utilisez pas le gabarit s'il n'est pas à l'échelle

Do not use template if not to scale. Verify dimensions before use.
N'utilisez pas ce gabarit s'il n'est pas à l'échelle. Vérifier les dimensions avant utilisation.